



**500 AMP JUMP-STARTER WITH COMPRESSOR
INSTRUCTION MANUAL**



Intertek

Catalog Number JS75C2PB

**Thank you for choosing Black & Decker!
Go to www.Baccusglobal.com to register your new product.**

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON:



If you have a question or experience a problem with your purchase, go to
[HTTP://WWW.BACCUSGLOBAL.COM](http://WWW.BACCUSGLOBAL.COM)
for instant answers 24 hours a day.

If you can't find the answer or do not have access to the internet,
call 1-877-571-2391 from 9 a.m. to 5 p.m. EST, Mon. – Fri. to speak with an agent.
Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.
Cat. # JS75C2PB
Copyright © 2018 Baccus Global LLC

SD061418

FEATURES

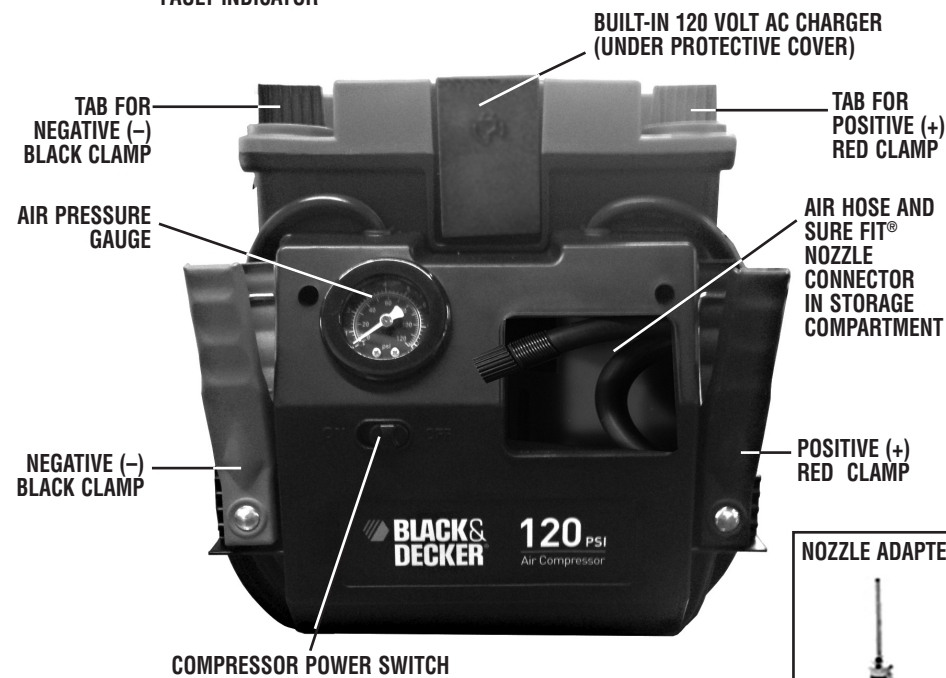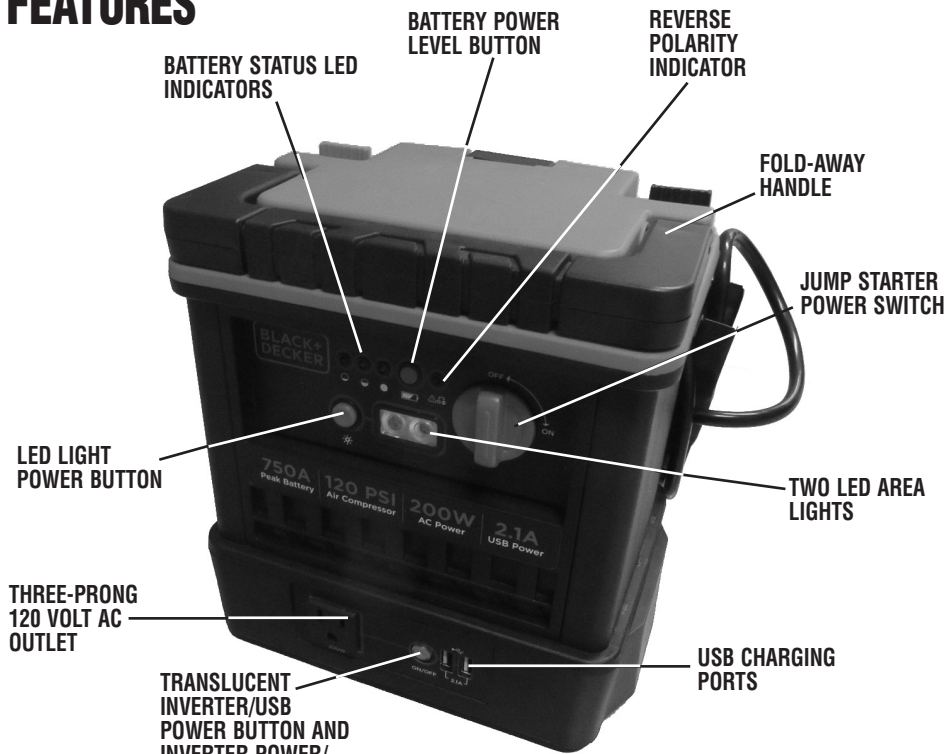

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

SAFETY GUIDELINES / DEFINITIONS

⚠ DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

RISK OF UNSAFE OPERATION. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

⚠ WARNING: Read all instructions before operating power station. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

GENERAL SAFETY WARNINGS AND INSTRUCTIONS

- This unit was designed for household use only.
- ⚠ WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, BURST HAZARD, OR INJURY TO PERSONS OR PROPERTY:**
- **Avoid dangerous environments.** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **Keep children away.** All visitors should be kept at a distance from work area.
- **Dress properly.** Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and substantial, non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
- **Use safety glasses and other safety equipment.** Use safety goggles or safety glasses with side shields, complying with applicable safety standards. Safety glasses or the like are available at extra cost at your local dealer.
- **Store idle appliance indoors.** When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.
- **Don't abuse cord.** Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- **Disconnect appliances.** Disconnect the appliance from the power supply when not in use, before servicing, and when changing accessories.
- **Ground Fault Circuit Interrupter (GFCI) protection** should be provided on the circuits or outlets to be used. Receptacles are available having built in GFCI protection and may be used for this measure of safety.
- **Use of accessories and attachments.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Refer to the accessory section of this manual for further details.
- **Stay alert.** Use common sense. Do not operate appliance when you are tired or impaired.
- **Check for damaged parts.** Any part that is damaged should be replaced by the manufacturer before further use. Contact the manufacturer at (877) 571-2391 for more information.
- **Do not operate this appliance near flammable liquids or in gaseous or explosive atmospheres.** Motors in these tools normally spark, and the sparks might ignite fumes.
- **Never submerge this unit in water;** do not expose it to rain, snow or use when wet.
- **To reduce risk of electric shock,** disconnect the unit from any power source before attempting maintenance or cleaning. Turning off controls without disconnecting will not reduce this risk.

- This equipment employs parts (switches, relays, etc.) that produce arcs or sparks. Therefore, if used in a garage or enclosed area, the unit MUST be placed not less than 18 inches above the floor.

SPECIFIC SAFETY INSTRUCTIONS FOR CHARGING THIS UNIT

- **IMPORTANT:** This unit is delivered in a partially charged state. Fully charge unit before using for the first time with a household extension cord (not supplied) for a full 24 hours or until the green LED Battery Status Indicator lights or flashes.
- All ON/OFF switches should be in the OFF position when the unit is charging or not in use. Make sure all switches are in the OFF position before connection to a power source or load.

Extension cords

⚠ WARNING: Use of improper extension cord could result in a risk of fire and electric shock. When using an extension cord, make sure that the pins of the extension cord are the same number, size and shape as those in the charger, and be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Volts	MINIMUM GAGE FOR CORD SETS			
	Total Length of Cord in Feet			
120V	0-25	26-50	51-100	101-150
	(0-7.6m)	(7.6-15.2m)	(15.2-30.4m)	(30.4-45.7m)
240V	0-50	51-100	101-200	201-300
	(0-15.2m)	(15.2-30.4m)	(30.4-60.9m)	(60.9-91.4m)
Ampere Rating	Extension Cord Length			
	More Than	Not more Than	0'-25'	26'-50'
0 -	6	18	16	16
6 -	10	18	16	14
10 -	12	16	16	14
12 -	16	14	12	Not Recommended
			51' - 100'	101' - 150'
			American Wire Gage (AWG)	

- When an extension cord is used, make sure that:
 - a) the pins of extension cord are the same number, size and shape as those in the charger,
 - b) the extension cord is properly wired and in good electrical condition,
 - c) the wire size is large enough for the AC rating of the charger.

⚠ CAUTION – TO REDUCE THE RISK OF PROPERTY DAMAGE: Pull by connector rather than cord when disconnecting the extension cord from the unit; and by plug when disconnecting the extension cord from an AC outlet.

SPECIFIC SAFETY INSTRUCTIONS FOR JUMP STARTERS

⚠ WARNING – BURST HAZARD

Do not use the unit for charging dry-cell batteries that are commonly used with home appliances. These batteries may burst and cause injury to persons and damage property. Use the unit for charging/boosting a lead-acid battery only. It is not intended to supply power to a low-voltage electrical system other than in a starter-motor application.

- Use of an attachment not supplied, recommended or sold by manufacturer specifically for use with this unit may result in a risk of electrical shock and injury to persons.

⚠ WARNING – RISK OF EXPLOSIVE GASES:

- Working in the vicinity of a lead acid battery is dangerous. Batteries generate explosive gases during normal battery operation. For this reason, it is of the utmost importance that each time before using the jump-starter you read this manual and follow instructions exactly.
- To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review cautionary markings on these products and on the engine.

⚠ CAUTION – TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:

- NEVER ATTEMPT TO JUMP-START OR CHARGE A FROZEN BATTERY.
- Vehicles that have on-board computerized systems may be damaged if vehicle battery is jump-started. Before jump-starting, read the vehicle's owner's manual to confirm that external-starting assistance is suitable.
- When working with lead acid batteries, always make sure immediate assistance is available in case of accident or emergency.
- Never smoke or allow a spark or flame in vicinity of vehicle battery, engine or power station

- To turn off the 120 Volt AC Outlet and the two USB Power Ports, press the Translucent Inverter/USB Power Button again (the Inverter Power/Fault Indicator will turn off).

Periodically press the Battery Power Level Button to check the battery status. (When all three battery status LEDs light, it indicates a full battery. Only one red battery status indicator light indicates that the unit needs to be recharged.)

AREA LIGHT

The built-in 2-LED area light located in the front of the unit is controlled by the LED Light Power Button on the front panel (refer to the Features section to locate). Press the LED Light Power Button once to turn the light on. Press the LED Light Power Button again to turn the area light off. Make sure the area light and the unit are turned off when the unit is being recharged or stored.

Periodically press the battery power level pushbutton to check the battery status. (When all three battery status LED light, it indicates a full battery. Only one red battery status indicator light indicates that the unit needs to be recharged.)

TROUBLESHOOTING

Problem	Possible Solution
Unit will not charge	<ul style="list-style-type: none"> Make sure all power switches are turned off. Make sure a suitable gauge extension cord is properly connected to both the unit and a functioning AC outlet.
Unit fails to Jump-Start	<ul style="list-style-type: none"> Make sure the unit's power switch has been turned on. Make sure a proper polarity cable connection has been established. Check that unit has a full charge. Recharge the unit if necessary.
Portable Compressor will not inflate	<ul style="list-style-type: none"> Make sure the Compressor Power Switch has been turned on. Make sure the Sure Fit® nozzle connector is securely screwed on to the valve stem when attempting to inflate tires; or that the nozzle adapter is securely screwed into the Sure Fit® nozzle connector and is inserted properly into the item to be inflated on all other inflatables. The compressor may be overheated. Turn the compressor off. Restart after a cooling down period of approximately 30 minutes. Check that the unit has a full charge. Recharge the unit if necessary.
LED Area Light does not come on	<ul style="list-style-type: none"> Make sure the LED Area Light ON/OFF button is in the ON position Check that unit has a full charge. Recharge the unit if necessary.

Specific Inverter Problems and Possible Solutions

When the 120V AC Outlet and/or either of the USB Charging Ports are in use, the unit monitors for the following fault conditions: thermal fault, low and high battery voltage fault, overload and short circuit (refer to the "Protective Features" section). If a fault condition exists in the AC Outlet or either of the USB Charging Ports, the Inverter Power/Fault Indicator will flash and the 120 Volt AC Outlet and the dual USB Charging Ports will all automatically shut down. Should this occur:

- Disconnect all appliances from the unit and make sure the unit's Translucent Inverter/USB Power Button has been pressed to turn the inverter functions off.
- Allow the unit to cool down for several minutes before attempting to use either the 120 Volt AC Outlet or USB Charging Ports again.
- Make sure the appliance cords and plugs are not damaged.
- Assure there is adequate ventilation around the unit before proceeding.

When Using the 120V AC Outlet

- Make sure the Translucent Inverter/USB Power Button is in the ON position.
- Ensure that the wattage of the equipment plugged into the 120 Volt AC Outlet does not exceed 200 watts continuous.
- Make sure you have followed all the steps in the "Using the 120 Volt AC Outlet and USB Charging Ports" section carefully.
- Refer to the "Specific Safety Instruction for Inverters" section.
- Make sure the USB Charging Ports are not in fault condition as the both the 120V AC Outlet and the dual USB Charging Ports will shut down simultaneously.
- Check that unit has a full charge. Recharge unit if necessary.

When Using the USB Charging Ports

- Make sure that the total draw of *all* USB devices plugged into the USB Charging Ports does not exceed 2.1A.
- Make sure you have followed all the steps in the "Using the 120 Volt AC Outlet and USB Charging Ports" section carefully.
- Refer to the "Specific Safety Instruction for USB Charging Ports" section.
- Some USB-powered household electronics will not operate with this type of USB Charging Port. Check the manual of the corresponding electronic device to confirm that it can be used with this type of USB Charging Port.
- If an individual USB device is within specifications and the fault occurs, have the USB device checked for malfunction and do not continue to use it with these USB charging ports.

CARE AND MAINTENANCE

All batteries lose energy from self-discharge over time and more rapidly at higher temperatures. When the unit is not in use, we recommend that the battery is charged at least every 30 days.

Never submerge the unit in water. If the unit gets dirty, gently clean the outer surfaces of the unit with a soft cloth moistened with a mild solution of water and detergent.

There are no user-replaceable parts. Periodically inspect the condition of adapters, connectors and wires. Contact manufacturer to replace any components that have become worn or broken.

Battery replacement/disposal

BATTERY REPLACEMENT

The battery should last the service life of the unit. Service life is dependent on a number of factors including but not limited to the number of recharge cycles, and proper care and maintenance of the battery by the end user. Contact manufacturer for any information you may need.

SAFE BATTERY DISPOSAL

Contains a maintenance-free, sealed, non-spillable, lead acid battery, which must be disposed of properly. Recycling is required. Failure to comply with local, state and federal regulations can result in fines, or imprisonment.

Please recycle.

⚠ WARNINGS:

- Do not dispose of the battery in fire as this may result in an explosion.
- Before disposing of the battery, protect exposed terminals with heavy-duty electrical tape to prevent shorting (shorting can result in injury or fire).
- Do not expose battery to fire or intense heat as it may explode.

ACCESSORIES

Recommended accessories for use with this unit may be available from the manufacturer. If you need assistance regarding accessories, please contact the manufacturer at 1-877-571-2391.

⚠ **WARNING:** The use of any accessory not recommended for use with this appliance could be hazardous.

SERVICE INFORMATION

Whether you need technical advice, repair, or genuine factory replacement parts, contact the manufacturer at 1-877-571-2391.

FULL ONE-YEAR HOME USE WARRANTY

The manufacturer warrants this product against defects in materials and workmanship for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period").

If there is a defect and a valid claim is received within the Warranty Period, the defective product can be replaced or repaired in the following ways: (1) Return the product to the manufacturer for repair or replacement at manufacturer's option. Proof of purchase may be required by manufacturer. (2) Return the product to the retailer where product was purchased for an exchange (provided that the store is a participating retailer). Returns to retailer should be made within the time period of the retailer's return policy for exchanges only (usually 30 to 90 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges.

This warranty does not apply to accessories, bulbs, fuses and batteries; defects resulting from normal wear and tear, accidents; damages sustained during shipping; alterations; unauthorized use or repair; neglect, misuse, abuse; and failure to follow instructions for care and maintenance for the product.

This warranty gives you, the original retail purchaser, specific legal rights and you may have other rights which vary from state to state or province to province. This product is not intended for commercial use.

Please complete the Product Registration Card and return within 30 days from purchase of the product to: Baccus Global LLC, One City Centre, 1 North Federal Highway, Suite 200, Boca Raton, FL 33432. **Baccus Global LLC, toll-free number: 1-877-571-2391.**

SPECIFICATIONS

Boost Ampere:	12V DC, 750A peak battery, 375A instantaneous
Battery Type:	Maintenance-free, sealed lead acid, 12V DC
AC Input:	120V AC, 60Hz, 13W
Area Light:	2 white LED
AC Outlet:	120V AC, 60Hz, 200W
USB Ports:	2.1A, 5V DC each
Compressor Maximum Pressure:	120 PSI

Sure Fit® is a registered trademark owned by Baccus Global, LLC.

Imported by Baccus Global LLC,
One City Centre, 1 North Federal Highway, Suite 200, Boca Raton, FL 33432
www.Baccusglobal.com 1-877-571-2391



BLACK+DECKER

PUENTE AUXILIAR DE ARRANQUE DE 350A CON COMPRESOR MANUAL DE INSTRUCCIONES



Intertek

Número de catálogo JS75C2PB

¡Gracias por elegir Black & Decker!
Visite www.Baccusglobal.com para registrar su nuevo producto.

LEA EL MANUAL ANTES DE DEVOLVER ESTE PRODUCTO POR CUALQUIER MOTIVO:

Si tiene una consulta o algún inconveniente con su producto, visite

[HTTP://WWW.BACCUSGLOBAL.COM](http://www.BACCUSGLOBAL.COM)

para obtener respuestas instantáneas las 24 horas del día.

Si no encuentra la respuesta o no tiene acceso a Internet, llame al 1-877-571-2391 de

Lunes a Viernes de 9 a.m. a 5 p.m. hora del este para hablar con un agente.

Cuando llame, tenga a mano el número de catálogo.

CONSERVE ESTE MANUAL PARA FUTURAS CONSULTAS.

Nº de Catálogo: JS75C2PB

Derechos Reservados © 2018 Baccus Global LLC

SD061418